



## **User Manual** (9.0 version)

Rev. 08/16



## **Android Network Digital Signage**

**Model: MYD23600.43.m**

**Operating Instructions for Digital Signage**

## Technical Specifications

	ITEM	MYD23600.43.m
<b>Panel</b>	LCD size	43"
	Light source	WLED
	Resolution	1920*1080 (pixels)
	Brightness (typ.)/(min)	500cd /m <sup>2</sup>
	Contrast (typ.)	1200:1
	Response (ms)	26ms
	Pixel pitch	0.4903×0.4903mm
	Refresh rate	60Hz
	Viewing angle	89°/89°/89°/89°
	Color saturation	68%
	Viewable area	941.184(H) X 529.416(V) mm
	Chromaticness	16.7M
<b>Power supply</b>	Voltage	AC100-240V
	Power Consumption	70W
<b>Environment</b>	Operating temperature	32~104 °F (0~40 °C)
	Storage temperature	-4~140 °F (-20~60 °C)
	Storage humidity	10~90% RH Non-condensing
	Operating humidity	10~90% RH Non-condensing
<b>Functions</b>	Operating system	Android 9.0
	Processor	Quad-core ARM Cortex-A72, 1.8GHz
	RAM	4G
	Built-in memory	32G
	Decoding resolution	1080P FHD compatible
	Playback mode	Yes
	Touch support	Yes

 
<b>Functions</b>	Supported Video Files	RMVB, FLV, MPEG1/2/4, AVI, DIVX, XDIV, WMV9, H.264, VC-1, MOV, MKV, MP4, TS, M2T
	Supported Photo Files	BMP/PNG/GIF/JPEG
	Supported Audio files	MP3, WMA, WAV, AAC+, MP2 dec, Vorbis (Ogg), AC3, FLAC, APE, BSAC;
	RTC (real-time clock)	Yes
	Schedule power on/off	Yes
	System update	Yes
	App installation	Support download and installation
<b>I/O interfaces</b>	USB 2.0	X2
	HDMI (IN)	X1
	SD	X1
	Rj45	X1
	3G SIM (Optional)	X1
<b>Touch</b>	Capacitive / Infrared	10 Point Capacitive Touch
<b>Structure</b>	Net weight	15.1KG
	Gross weight	16KG
	Unit dimensions	1004x58x598.5mm
	Package dimensions	1120x175x720mm
	Shell material	Metal
	Shell color	Black glass, silver profile
<b>Language</b>	OSD	English, French, German, Simplified Chinese ect.

### Packing List

Name	
1 Digital Signage	●
1 Remote Control	●
1 Operation Manual	●

Name	
1 Power Cord	●
1 Cleaning Kit	●













### Interfaces

 

1. Power port 2. ON/OFF Button 3. RJ45 (Ethernet) 4. HDMI port 5. 3G SIM 6. USB port

## Remote Control



-  1. Power on/off button.
-  2. Press this button to return to home screen.
-  3. Press MENU to organize screens and apps.
-  4. Mute. Press this button to mute the sound.
-  5. Upwards Arrow. Move up selection or move the cursor up.
-  6. Downwards Arrow. Move down selection or move the cursor down.
-  7. Leftwards Arrow. Move selection to the left or move the cursor left.
-  8. Rightwards Arrow. Move selection to the right or move the cursor right.
-  9. Confirm button, select the use menu or setup menu, press this button to confirm
-  10. Turn volume up
-  11. Turn volume down.
-  12. Return to previous page or a level up in an app.

NOTE: Only buttons shown above have functions.

 
## Description of Basic Operation

### Power on/Standby

Insert the power plug into the outlet. If the Digital Signage has the switch button “I”, turn it on. In power on state, press the “⏻” button on the remote control, and the Digital Signage enters standby state.

### Interface and Home Screen

After power on, the machine shown below:

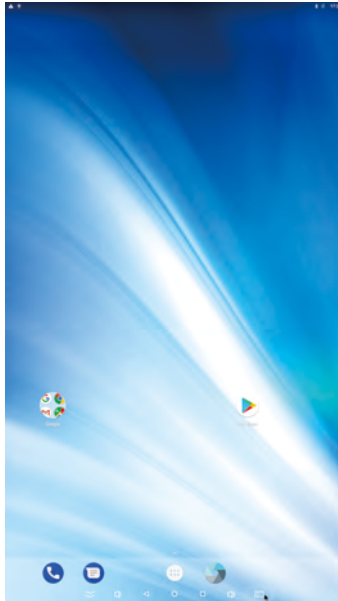

will launch home screen, as

- A.  B.  C.  D.  F. 

### Description of Wallpaper Switch

We suggest using a mouse to change the wallpaper.

Connect a mouse with the digital panel through USB port, then follow the steps below:

- 1.click “Setting”
- 2.At the setting menu, click “Display”
- 3.At the Display setting menu, click “Wallpaper”, then choose a folder.
- 4.Then select an image you would like to set up as background.
- 5.Confirm the selection by clicking “Set wallpaper”.

## File Manager

1. Click the Main Apps button “☺” in the Home screen to enter the “APPS” menu interface (Fig. 2);
2. Click the “Explorer” icon in the “APPS” menu interface (Fig. 2) and enter “Explorer” menu (Fig. 3);
3. Choose storage in the “Explorer” menu to read the files from different devices.

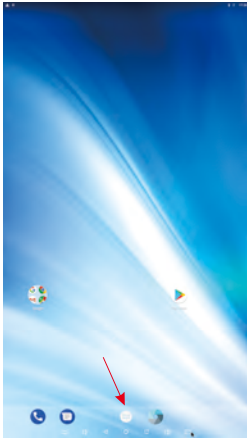 


Fig. 1

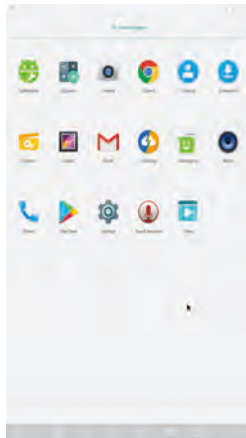 


Fig.2



Fig.3

## Local Settings

1. Click the “Settings” icon (Fig. 1) and enter “Settings” menu (Fig. 2);
2. Click “Wi-Fi” and choose options then set up the WIFI connection.

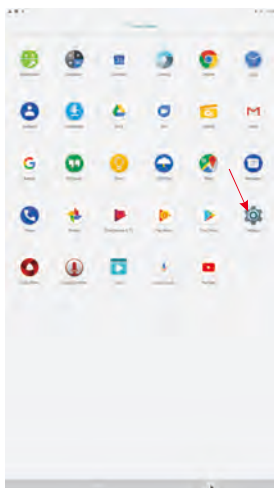










 












Fig. 1



Fig.2

## Description of Settings Interface (shown on the right)

 Icon	Function
	WIFI switch
	Data usage
	Bluetooth
	USB
	Sound & notification
	Battery saver
	HDMI
	Display
	Storage
	Apps
	Screenshot Setting
	Location
	Accounts
	Backup & reset
	Security
	Language & input
	Date & time
	Printing
	Accessibility
	About device

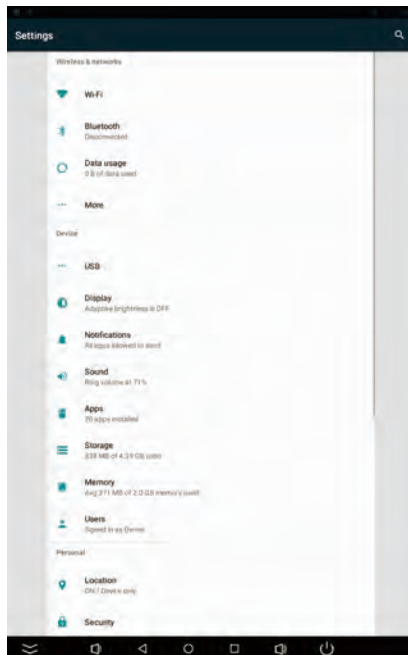

## Status of Menu Bar

1. Click the setting
2. At the setting menu click the display menu
3. At the display setting menu unselect the display navigation check box

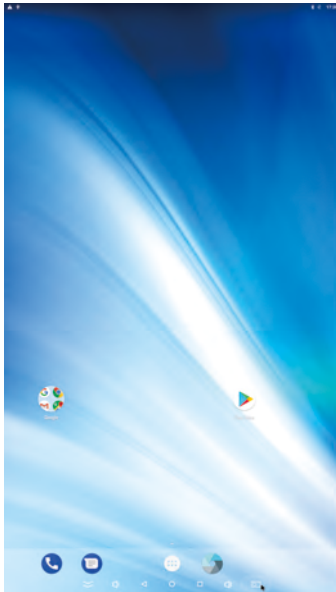 


Fig. 1

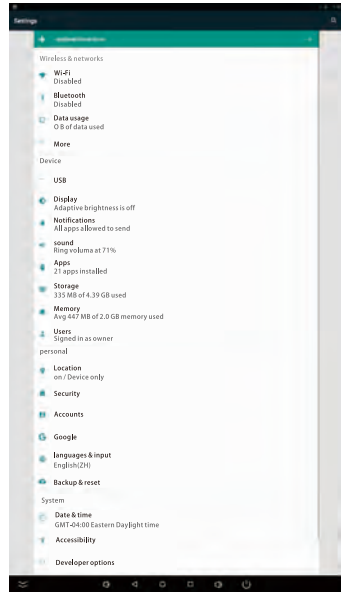 


Fig. 2

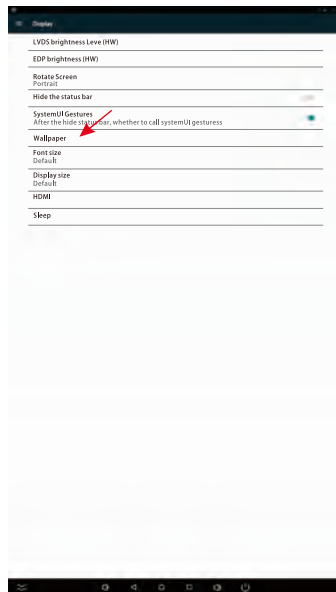 


Fig. 3



